



NEO wheelbase

NEO Wheel lock - Part no NWL20F

Fitting Instructions

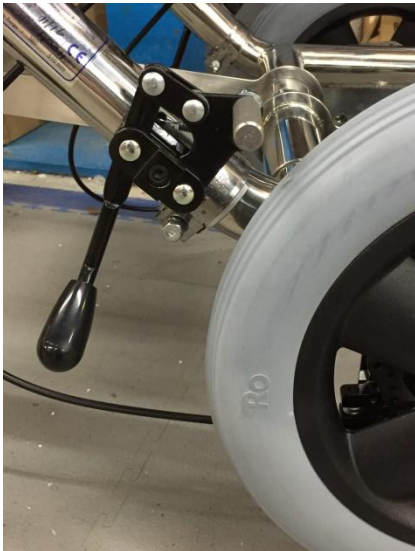

Remove pinch bolt from stainless steel 'Mikalor' clamp. Spring open over chassis side rail. Refit bolt and clamp alloy saddle mount in place as seen in picture. The plastic tube can be fitted over the end of the thread to avoid sharp edges.

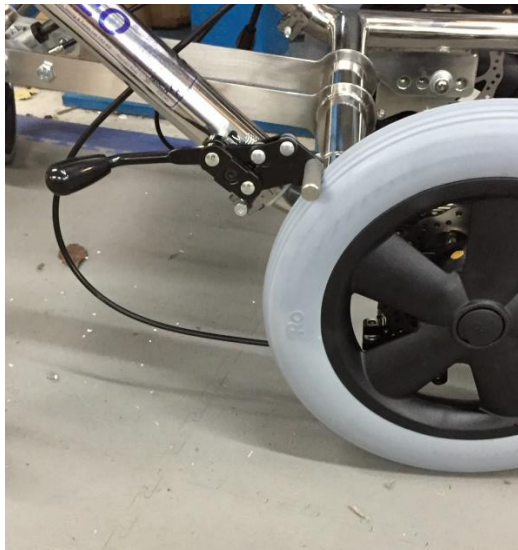

To adjust brake, slide the whole assembly on the frame and clamp in position. Torque bolt to 12 Nm. Repeat for other side.